

**L&L Skin**

**Rika**

**High- speed hair dryer**



1. Safety instructions
2. Part names
3. Specification
4. Operation instructions

### **Safety instructions**

#### **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, especially when children are present, basic safety precautions should be followed, including the following.

#### **READ ALL INSTRUCTIONS BEFORE USING**

#### **KEEP AWAY FROM WATER**

#### **DANGER:**

As with most electrical appliances, electric parts are electrically live when switch is off.

To reduce the risk of injury or death by electric shock:

1. Always unplug the tool immediately after using as the unit is still electrically charged.
2. Do not place in or drop into water or other liquids.
3. If an appliance falls into the water, unplug it immediately. Do not reach into the water.
4. If using electrical appliance near water, install GFCI outlets in all electrical outlets into which electrical appliance will be plugged.
5. Do not handle any parts of the plug or appliance with wet hands.

#### **⚠ WARNINGS:**

Do not use appliance near bathtub, sink, or other containers or basins filled with water.

Do not use appliance while bathing.

## DESCRIPTIONS

### **WARNING:**

The appliance attachment ( the styling nozzle) contain magnets.

Keep away from pacemakers, defibrillators, credit cards and electronic storage media.


### **WARNING:**

To reduce the risk of burns, electrocution, fire, or injury to persons:


1. When not in use, unplug the dryer. Allow it to cool and store in a safe, dry location.
2. This dryer is hot when in use. Do not let eyes or bare skin touch heated surfaces.
3. Do not place the heated dryer directly on any surface while it is hot, other than a thermal mat or other proper surface.
4. Never leave the appliance unattended while plugged in.
5. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
6. This dryer is intended to be used only on head hair. Do not use the appliance for any other purpose than drying hair.
7. Use this appliance only for its intended use as described in this manual.
8. Never operate this appliance if it has a damaged cord or plug.
9. Never allow the power supply cord to be pulled, jerked, strained, twisted, or severely bent, especially at the plug connections. The foregoing may damage the cord, including at or near the high flex point of entry into appliance, causing it to rupture and short. Handle the cord carefully for longer life.
10. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
11. Never drop or insert an object(s) into any opening in the appliance.
12. Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
13. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord. Do not use an extension cord with this appliance.
14. Never use while sleeping.
15. Do not operate with voltage converter.
16. This appliance is provided with a protective device that may make it inoperable under some abnormal conditions (such as immersion of the appliance).
17. If appliance is not working properly, return it to Customer Service for examination and possible replacement under warranty.
18. Do not use near eyes, skin or other heat sensitive areas.
19. Do not leave dryer in hot humid places.
20. Keep the air openings free of lint, hair, and the like.
21. Do not place appliance on any surface while it is operating.
22. Discontinue use immediately and unplug if dryer becomes too hot or malfunctions in any way.
23. This appliance has not-self resetting thermal cut out safety device to prevent overheating. If your appliance cuts out in use with the second led light flashing, turn off and unplug it from the mains supply socket and leave to cool.

24. This appliance is only for household use.

## Part names

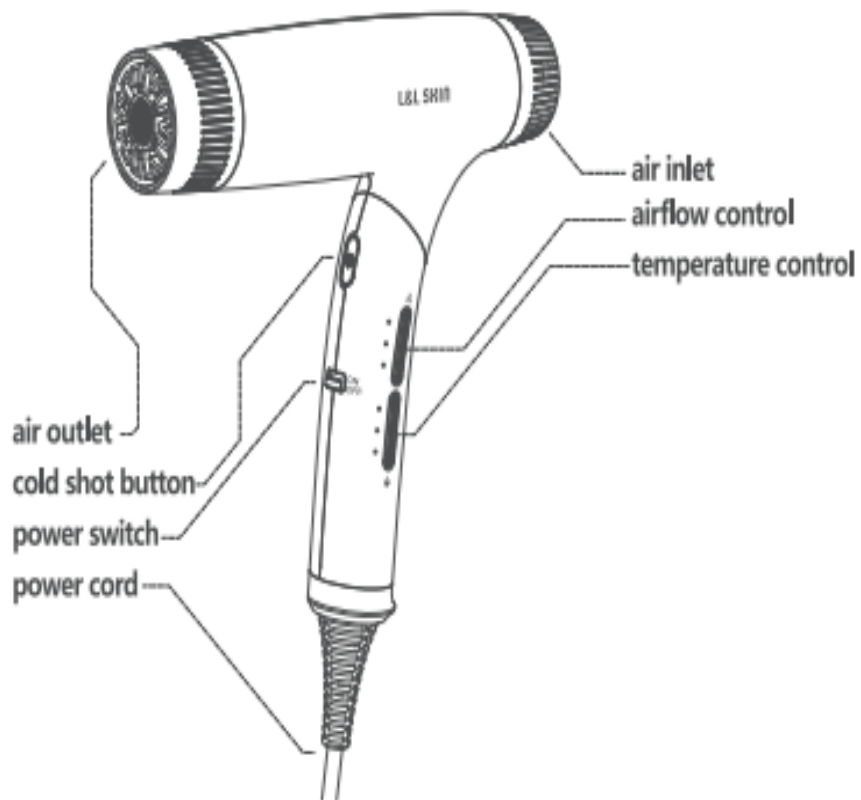

## Attachments

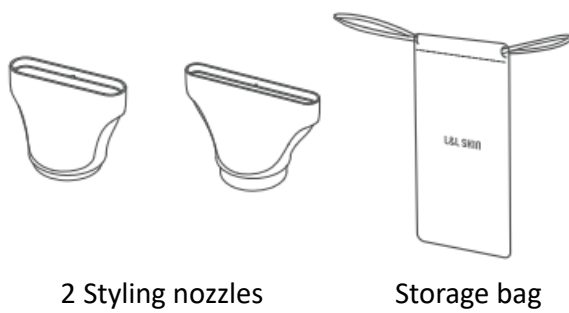

## Specification

Product: Hair Dryer

Model: HD-22

Power supply: AC 220V–230V 50/60Hz

Rated power: 1500W

Temperature:

**H:** 110°C / 230°F   **M:** 82°C / 180°F   **L:** 60°C / 140°F


Maximum motor speed: around 110.000 rpm

Weight: about 580 g

Cord length: about 2 m

## Use instructions

### 1. Power on

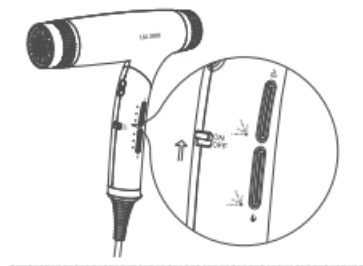

The power plug needs to be fully inserted into the socket.

Push the switch on the "ON" position to start working.

(When switched on for the first time, the hair dryer will blow air at the minimum temperature and intensity, the first LED on the left side of the two buttons will light up)

### 2. Airflow control

The hair dryer is set to 3 levels of wind speed, press the airflow control button once to change one level, and the corresponding white LED will light up.

### 3. Temperature control

The hair dryer is set to 3 levels of temperature, press the temperature control button to change one level, the corresponding white LED will light up. Press the cold shot button once to switch the cold air directly, press it again to restore the hot air.

### 4. Memory function


The hair dryer has a memorization function that allows preserving the temperature selected for previous use. The function allows establishing the temperature and the air flow speed ideal for your need and hair type, guaranteeing a practical and efficient use.

## 5. Auto-cleaning function

This hair dryer features an auto-cleaning function to clean its inner components.


### Auto-cleaning usage method:

Once the hair dryer is on, long press the temperature/airflow reducing button, the motor will be started to reverse and automatically clean. During this process, press any button to restore or automatically restore after 15 seconds. Reinstall the accessories for normal use.

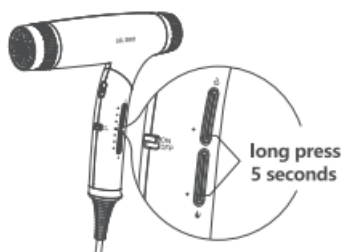

## Cleaning and maintenance

- Correct and effective maintenance can ensure a good user experience and increase appliance life.
- Before cleaning the appliance, unplug it from the power outlet and wait until it cools off.
- Periodically remove dust and hair from the unit.

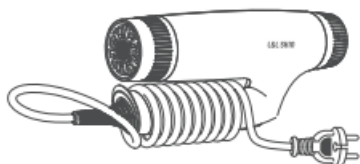


### Cleaning steps:

To remove the rear cover filter, hold the body of the hair dryer and turn the rear cover counter clockwise.

### **⚠ ATTENTION:**

Do not disassemble the stainless steel filter inside, otherwise it may cause injury.

- Use a towel or sponge to clean the filter parts.
- Please make sure all parts are completely dry before reinstalling the rear cover.
- Clean the body of the appliance with a damp cloth or sponge.
- Make sure that the appliance is completely dry before using or storing it.

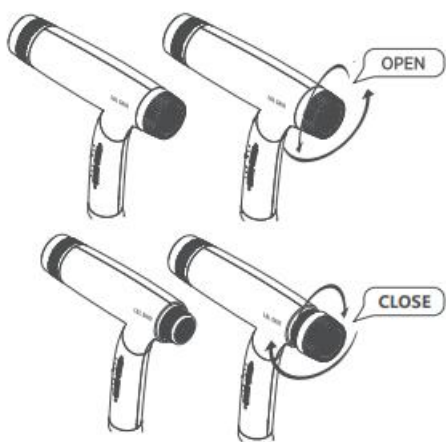

### Storage

Hold the hair dryer body, and then hold the handle to rotate clockwise.

